

Spareparts




EXCENTERSCHUURMACHINE

PONCEUSE EXCENTRIQUE

CE

Bestelnr./N° de cde. 29060

EXCENTERSCHUURMACHINE 29060

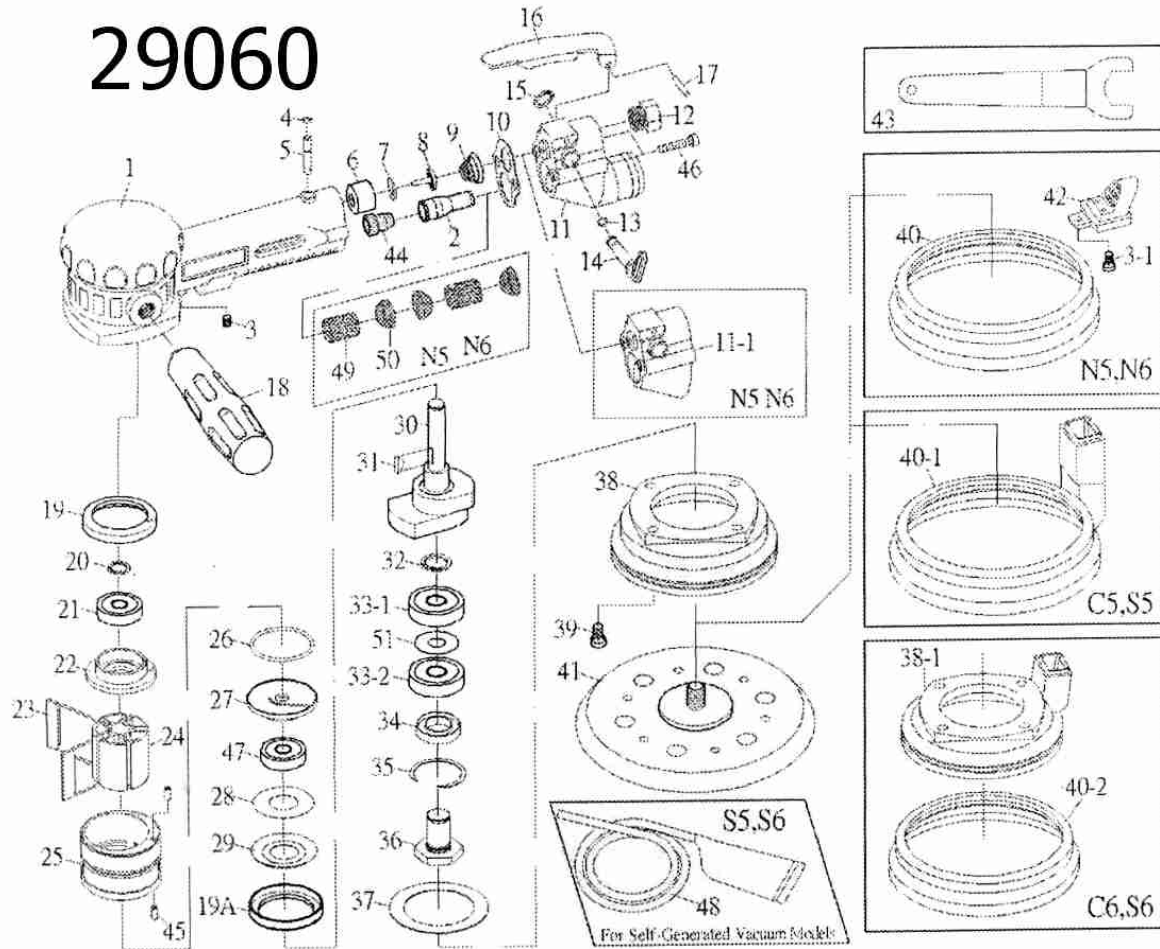

NO	PARTS NO.	DESCRIPTION	QTY	NO	PARTS NO.	DESCRIPTION	QTY
1	ST2HS-01	HOUSING	1	28	OB-28	WASHER	1
2	2HG-03	MUFFLER BODY	1	29	E-29	WASHER	1
3	2HG-04	SCREW (M4*8)	1	30	ST2HS10-33	SHAFT BALANCER	1
3-1	4500-43	SCREW (M4*12)	1	31	DL70407	ROTOR KEY	1
4	OB-04	O-RING	1	32	OB-30	SNAP RING	1
5	2HG-06	VALVE STEM	1	33-1	OB-31.1	BEARING (6001LU)	1
6	2HG-07	BUSHING	1	33-2	OB-31.2	BEARING(6001)	1
7	OB-06	WASHER	1	34	OB-32	SHAFT SEAL	1
8	OB-08	VALVE	1	35	OB-33	SNAP RING	1
9	OB-09	SPRING	1	36	2HS-37	SHAFT	1
10	2HG-11	PACKING	1	37	A-47	WASHER	1
11	ST2HG4-12C	HOUSING BACK SEAT(C,S)	1	38	OB-35	HOUSING COVER	1
11-1	ST2HG4-12N	HOUSING BACK SEAT(N)	1	38-1	2HS-39	HOUSING COVER (C6, S6)	1
12	70426	AIR INLET	1	39	2HG4-32	SCREW(M5*12)	4
13	2HG-13	O-RING	2	40	OB-37	SHROUD (N5, N6)	1
14	2HG-15	REGULATOR	1	40-1	2HG4-47	SHROUD (C5,S5)	1
15	2HG-16	SNAP RING	1	40-2	2HG-50	SHROUD (C6, S6)	1
16	70013	LEVER	1	41	BTOB-38-5V6	PAD 5"	1
17	OB-14	PIN(3*40L)	1	41	BTOB-38-6V6	PAD 6"	1
18	BT80438-12.5	HANDLE	1	42	2HS-38	EXHAUST SLEEVE(N5, N6)	1
19	OB-16	RUBBER BUSHING	1	43	OB-39	STOP SPANNER	1
19A	OB-16.2	RUBBER BUSHING	1	44	2HG-02	CONE MUFFLER	1
20	OB-17	SNAP RING	1	45	81326	PIN (3*8)	2
21	OB-18	BEARING(6000ZZ)	1	46	2HG-12.1	SCREW(M4*20)	2
22	STOB-19	REAR PLATE	1	47	OB-26	BEARING(6002ZZ)	1
23	2HS-23	ROTOR BLADE	5	48	OB-46-2	RUBBER HOSE & BAG(S5, S6)	1
24	ST2HS-24	ROTOR	1	49	SX-11	NOISE ELIMINATION POLY FIBER	2
25	ST2HG-27	CYLINDER	1	50	SX-11.1	NOISE ELIMINATION STAINLESS MESH	3
26	OB-24	O-RING	1	51	OB-23.2	SHIM	1
27	STOB-25	FRONT PLATE	1				